



**GS** **TECHNIK**® Orlov 15, 391 33 JISTEBNICE  
Czech republic  
phone: +420 381 202 411  
fax: +420 381 202 429  
e-mail: info@gstechnik.cz  
www.gstechnik.cz

Exclusive producer of Wine Dispensers for



# Wine Dispenser

Stainless Wine Dispensers By the Glass


WD6, WD8, WD10, WD12, WD14, WD16, WD20

## INSTRUCTIONS FOR USE CARD SYSTEM



## By the Glass Card System


Use the main switch on side of engine compartment and turn the Wine Dispenser on, the Card system display shows:

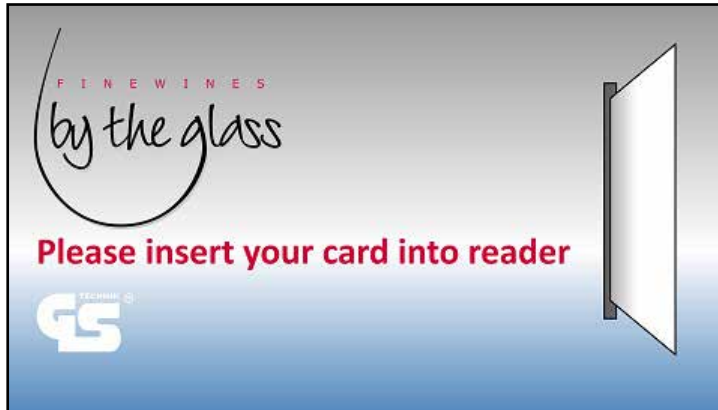

Wine dispenser with By the Glass Card System is supplied with four types of service cards:



- change bottle
- calibration volume and price

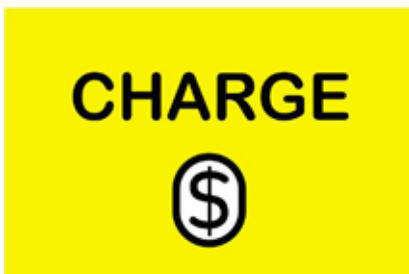

### card manage


- charge customer cards
- change the bottles



### bottle change

- change the bottles
- cleaning, if display buttons available

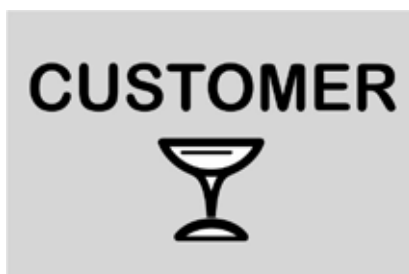

Cards SERVICE, CHARGE and WAITING STAFF also enable statistics control **System LOG** and Info + set time and date.



- enable dosing the wine

Before putting into the operation is necessary to set dosages, prices and volumes, by each position of Wine Dispenser, this is feasible with few easy steps. Convenient is to use a bottle with water, it helps adjust times needed for dosing the right volumes, without wasting the wine.

Please take into account that water may have different thickness than the wine, therefore is fine to verify set volumes also with wine after the procedure under **point 2**.


Whole process is easily feasible, just follow instructions and use  to confirm, or  to leave without the changes.





Please take into account that the tolerance in the volume of the doses is 2%.

## 1. Connect/change the bottle

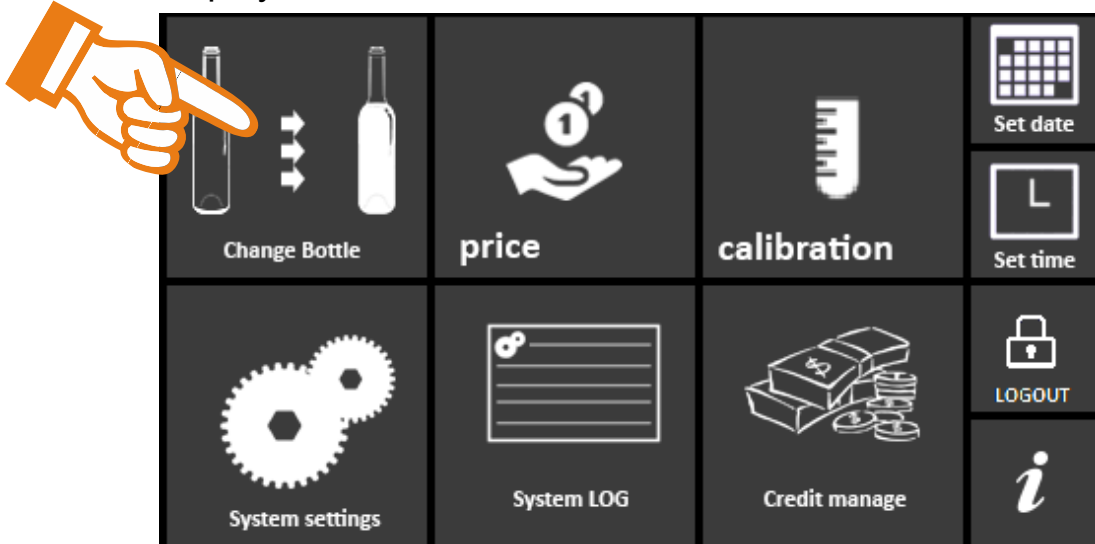- insert **SERVICE, CHARGE** or **WAITING STAFF** card into the slot, display shows:



- enter “**Change Bottle**”
- display shows „**Bottle is not selected**“
- choose right bottle position (from left to right) and confirm 
- choose volume of the bottle (push the position button and put the bottle under the pressure) and confirm 



- by different amount in the bottle use bottle with question mark












- with **+** or **-** set right volume and confirm for return to previous menu and again confirm
- **to verify the remaining volume in the bottle** insert one of cards mentioned above
- choose right bottle position (*from left to right*) and confirm
- display shows residue on the right side
- **to quit push 2x**
- display buttons:
  - insert card **WAITING STAFF**
  - all displays are in change/rinse mode
  - by position where changed bottle is push small button under **CHANGE**, bottle is changed, than push + 0,2 cl, this will put the bottle under the pressure
  - in this mode is possible check remaining volume by all bottles
- **when replacing empty bottle with bottle of different wine, especially white–red, red–white, flush the system with water to remove possible remains in tubes**



## 2. Volumes calibration

- connect bottle of water to first position from left side
- test with measuring glass
- insert **SERVICE** card into the slot



- enter “**Calibration**”
- choose right bottle position and confirm , display shows:
- first set amount 1 dl, push the symbol confirm 
- use the measuring glass and push TEST on the screen, do not change preset time, **dosing starts**, than check amount in the measuring glass
- **if volume does match** confirm ,
- after you confirm the time by 1 dl, system automatically adjust times by 2 cl and 1 dl, please control also both smaller dosages
- choose another volume again confirm  and repeat as above
- **if volume does NOT match** with  or  adjust needed time in milliseconds (1 second = 1000 ms) and push TEST,
- repeat until reach needed volume, than confirm 
- after you confirm the time by 1dl, system automatically adjust times by 2cl and 1dl, please control also both smaller dosages
- choose another volume again confirm  and repeat as above
- set all 3 amounts by all positions
- as starting time use time in previous positions
- time needed for dosing is based on thickness of the wine:
  - 2 cl – approx. 1000 ms
  - 5 cl – approx. 2500 ms
  - 1 dl – approx. 5000 ms
- to quit push 

## 2a. Different volumes

- via AES software is also possible change default wine volumes in glasses
- touch display does not show adjusted volumes, only buttons displays
- please read AES manual

### 3. Price of Wine

- insert **SERVICE** card into the slot
- enter “**price**”
- choose right bottle position and confirm ✓
- choose the amount and confirm ✓
- with **+** or **-** adjust needed price and confirm ✓
- choose another volume again confirm ✓ and repeat as above
- set prices by all positions and volumes

### 4. Charge customer's card

- insert **CHARGE** card into the slot
- enter “**credit manage**”, display shows:

		7	8	9
Credit:	DEL	4	5	6
Add:	ADD	1	2	3
READ	WRITE	⏪	0	✖

- and „**replace the card for the customer, and read**“, replace the card and enter read
- with keypad set the sum of money and enter “**ADD**”
- “**DEL**” resets the sum of money
- after “**ADD**” or “**DEL**” remove the customer card, now you can insert next customers card and follow instruction above
- if you want to quit this operation, remove customer card first and then confirm ✖, charge operation is off, **OTHERWISE FUNTIONS REMAINS AKTIVE.**



### 5. Set time and date

- with **+** or **-** simply set time or date

## 6. System LOG/Info

- **System LOG** shows all procedures made with Wine Dispenser

## 7. Info

- Info show total overview of all positions


## 8. Customers card

- If there is no card insert in the slot of the reader slot, display shows amount and price of the wine set on each position,
- insert **CUSTOMER** card into the slot, display shows:



- in the left column credit on card
- in the right column by dosing the bottle position, amount and price of wine
- display buttons (if available):
  - name of the wine, year, price and dose volumes
  - after placing customer card in to the slot it shows credit on card, actual purchase, price and dose volumes

## 9. Cleaning

- for cleaning use please directions in INSTRUCTIONS FOR USE and:
- follow calibration instructions **point 2** – insert **SERVICE** card
- connect the bottle with water or cleaning solution
- enter “**Calibration and Price**”
- choose right bottle position (*from left to right*) and confirm 
- push repeatedly TEST until the bottle is empty (*do not change set time*)
- *display buttons:*
  - insert card **waiting staff** card
  - push small button under **RINSE**, cleaning starts
  - to stop the cleaning push left button by the position beside/take out the card
  - take out the waiting staff card
- touch display + display buttons
  - insert card **waiting staff** card
  - push small button under **RINSE**, cleaning starts
  - to stop the cleaning push rinse by the position beside/take out the card
  - take out the waiting staff card



PRODUCER:

**GS TECHNIK spol. s r. o.**

Orlov 15, 391 33 JISTEBNICE, Czech republic  
phone: +420 381 202 411; fax: +420 381 202 429  
e-mail: [info@gstechnik.cz](mailto:info@gstechnik.cz)  
[www.gstechnik.cz](http://www.gstechnik.cz)

